

EXA
FWD
HNB/G
USB/G
FAB/G
FGB/G
FVB
FWB/G
FHB
FLB
AB
AG
AP/
AD
APK/
ADK
DryAir
EX-
XPLNprf
XPLNprf
HVB/
HVL
S ◇ B/
NAB
LAD/
NAD
Water-
Rela
NP/NAP/
NVP
SNP
CHB/G
MXB/G
Other
valves
SWD/
MWD
DustColl
CVE/
CVSE
CCH/
CPE/D
LifeSci
Gas-
Combus
**Auto-
Water**
Outdoor
SpecFld
Custom
Ending



Rain sensor

RS-6 rain sensor

- Automatically detects rain volumes of 6 mm or more
- Power supply/amplifier not required

Main applications

- Watering of parks and urban greenbelts
- Watering of greenery within buildings and on rooftops
- Watering of soccer fields and various grounds
- Watering of golf courses
- Watering for prevention of dust pollution
- Others

Applicable controller series

- RSC-S5
- RSC-G
- RSC-1WP
- RSC-2WP
- RSC-W-2WP

Overview

- Power supply unit not required
- Automatic recovery depending on the weather situation
- Operating accuracy ± 1 mm (rain volume)
- Water saving effect


Caution

- *1 : The felt of No. ③ is a repair part.
*2 : Make sure that the lead wire is no longer than max. 5 m when extending the lead wire.

Specifications

Item	RS-6
Operating rain volume	6 mm
Return time	6 to 20 hours (will vary depending on the weather)
Angle of installation	$\pm 2^\circ$ or less both lengthwise and widthwise

Internal structure and dimensions

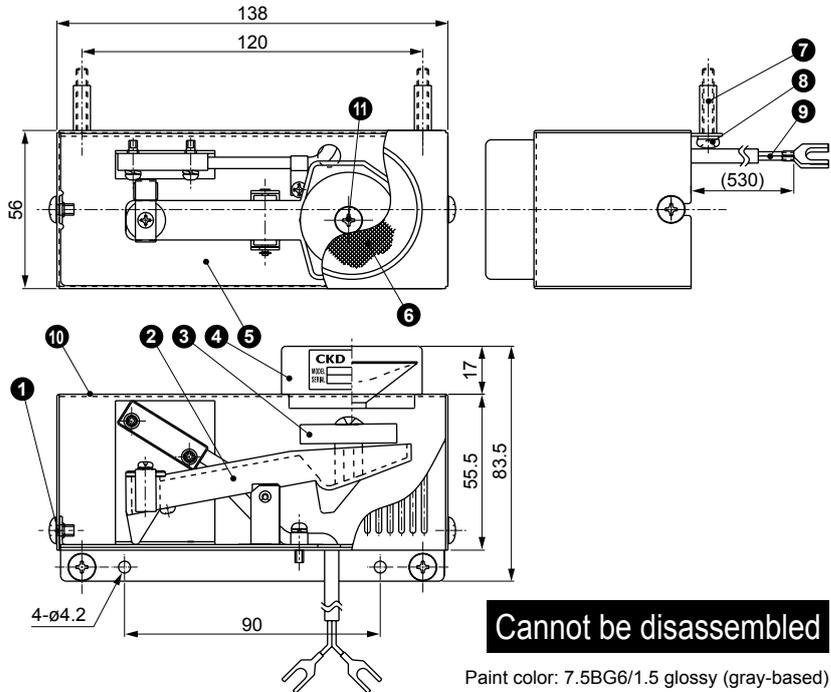

No.	Part	Material	Qty.	Remarks	No.	Part name	Material	Qty.	Remarks
1	(+) truss head screws	SUS304	2		7	Stud	SUS304TP	2	Included
2	See-saw body	PBT	1		8	(+) pan head screws with spring seat		2	Included
3	Felt	Ester, acrylic, Bell Oasis	1	4 included	9	Lead wire	UL1007 product	2	
4	Funnel	A5056BD	1		10	Cover	SECC-P	1	
5	Chassis	SUS304	1		11	Tapping screw	SUS304TP	1	
6	Wire mesh	SUS304	1						

Rain sensor mounting procedures

When mounting this product on the RSC-S5 solar controller, follow the procedures outlined below.

Rain sensor mounting procedures

1 Mounting

As the control box is provided with mounting holes, mount the rain sensor using the included studs.

2 Lead wire wiring

Arrange the lead wire of the rain sensor along the stud and further guide the wire along the control box from the hole of the rubber bushing in the bottom surface. Insert the lead wire as far inside the box as possible.

3 Wiring

Connect the lead wire to the stop terminal within the control box.

The connection can be established with either terminal as there is no polarity.

Rain sensor inspection outline

Rain sensor inspection outline

- Periodically inspect the rain receiving (funnel) section to make sure that there is no foreign matter such as dried leaves.

- Replace the felt every six months, such as before the start of a season.

(Since dust on the felt will suppress the efficiency of absorption and evapotranspiration of rain water and lower performance)

[How to perform inspections]
By loosening the small (+) truss head screws ① (x 2) as shown in the internal structure diagram, the cover ② can be removed upwards.

If the surface of the felt has become discolored and is black, remove the tapping screw ③ and replace the felt with a spare product.

- If there are no more included felts available, place an order for "felts for the rain sensor". 5 pieces are included in a set.
- When the rain sensor (RS-6) is connected to the RSC controller, the sensor will function according to automatic and temporary programs, regardless of manual operation.
- Be sure to use a lead wire length of max. 5 m.

EXA
FWD
HNB/G
USB/G
FAB/G
FGB/G
FVB
FWB/G
FHB
FLB
AB
AG
AP/AD
APK/ADK
DryAir
EX-XPLNprf
XPLNprf
HVB/HVL
S&B/NAB
LAD/NAD
Water-Rela
NP/NAP/NVP
SNP
CHB/G
MXB/G
Other valves
SWD/MWD
DustColl
CVE/CVSE
CCH/CPE/D
LifeSci
Gas-Combus
Auto-Water
Outdoor
SpecFld
Custom
Ending